




MGS VALVE ISOLATION BOX

DESIGNED AND TESTED TO COMPLY WITH AS2896-2021

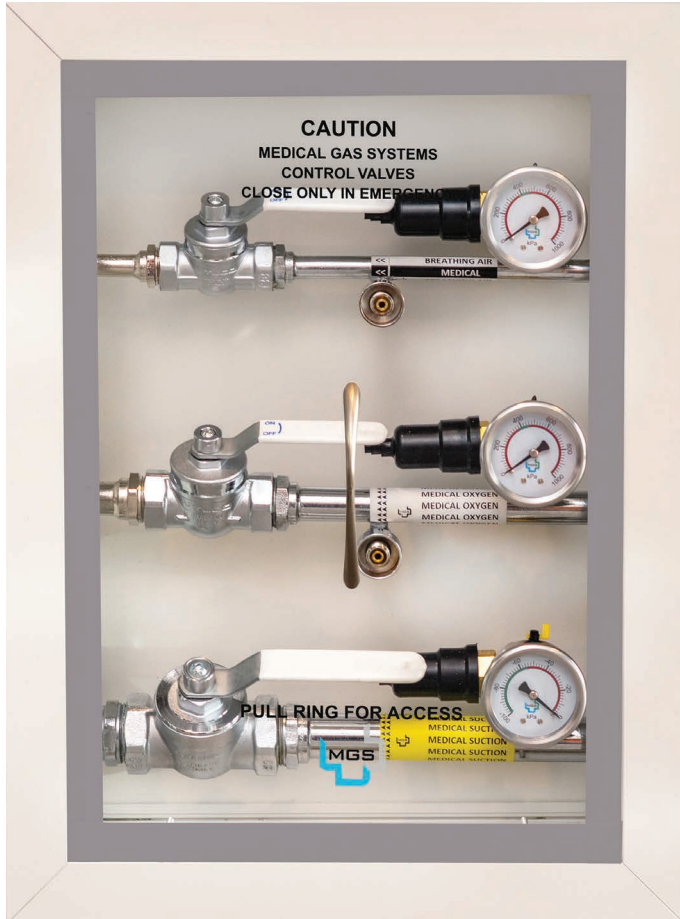

Designed to fit in
90mm stud walls

Powder coated backing box and
facia with clear Perspex cover for
easy access to valve assemblies

Gauge and pressure switch
assembly fitted with vented
valve to drain pressure switch
and gauge when isolated
allowing testing of switch
with no interruption to
downstream supply

ORDERING INFORMATION

MGS boxes can be made in 1, 2, 3, 4, 5 and 6 gang configurations
or custom made upon request

Size	OXY	MA	N2O	CO2	TA	SUC
15mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
20mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
32mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
40mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
50mm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Emergency
Fill Points on
Oxygen and
Medical Air
assemblies
are standard